CU4K30 – Quick Test for CSC

Item1-HDMI test



Test Environment: Windows 10 OS

Stream Equipment			
1	NB or PC USB port link to port ①		
2	NB or PC USB port link to port ②		
3	LCD Monitor link to port 3		

Check Item		
Light 6	USB 2.0->green /USB3.0->blue	
LCD Monitor 3	Check if LCD display same as NB	



Check if UVC device was in Device manager as below.





1. Install AP: OBS

Download from https://obsproject.com/ or SIP.

Ps: Please install VC_redist.x64 if OBS can't be installed.








2. Select Setting


Click "+" as below.

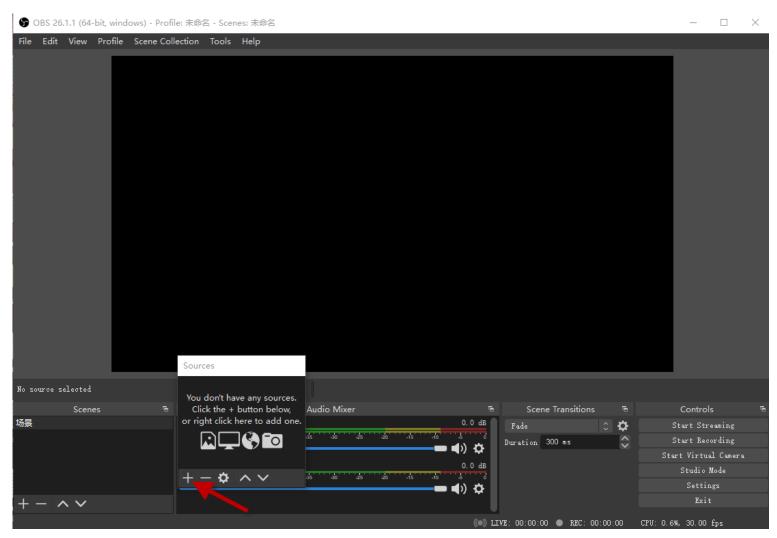



3. Select Setting


Select Video Capture Device

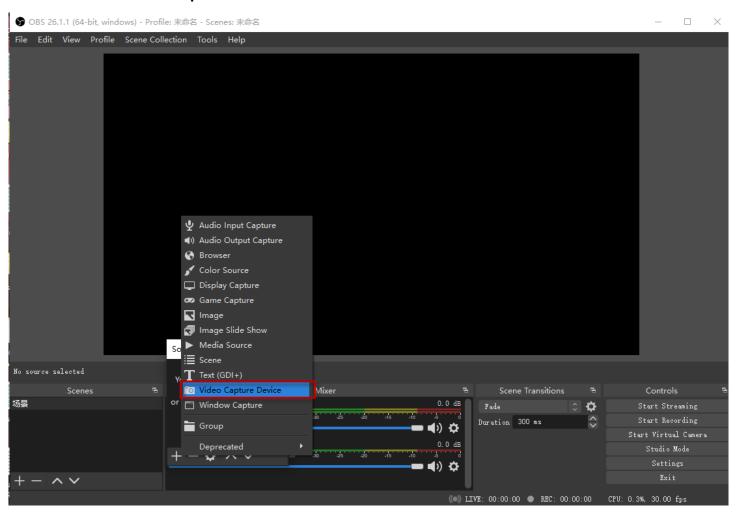



3. Select Setting


Click "ok" to continue

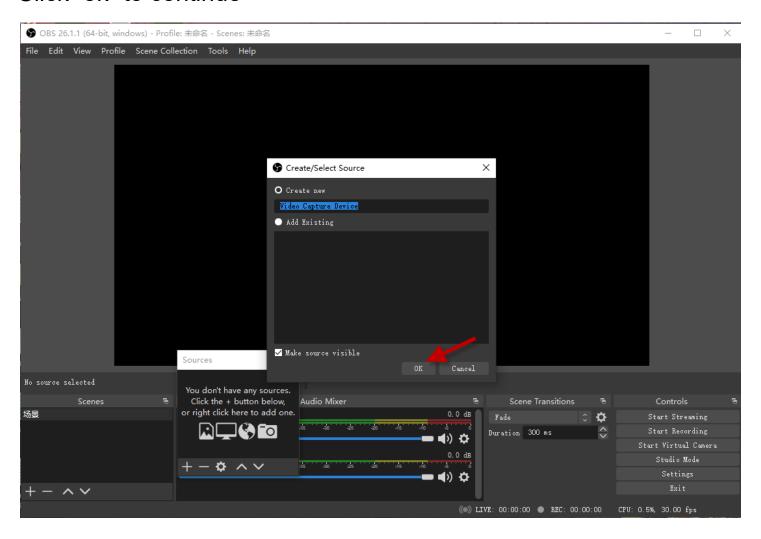




3. Select Setting

Select **Device** and **Resolution**, then click "ok" to continue.

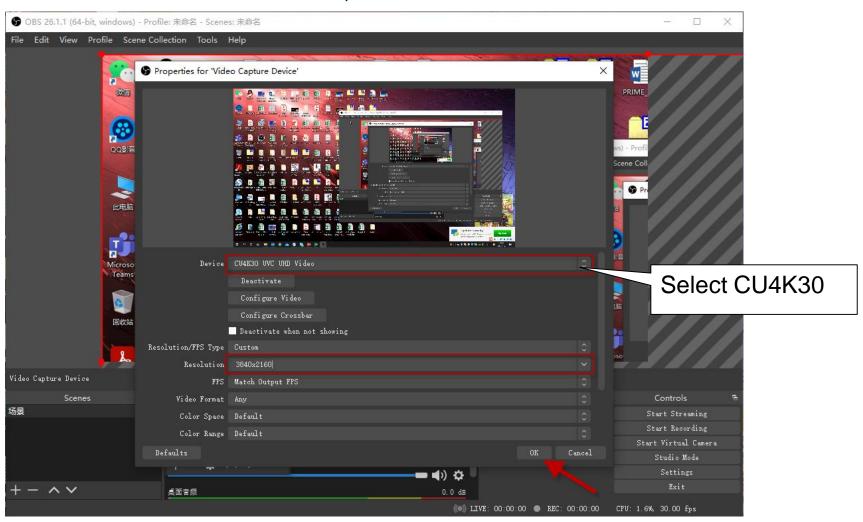



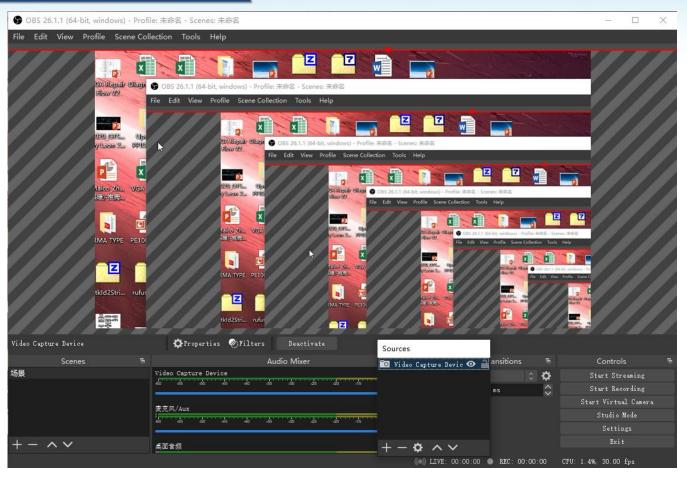

Check Item			
Light 6	Rainbow		
LCD Monitor & NB/PC	Check if screen as above		



Item3-Voice



Stream Equipment			
1	NB or PC USB port link to port 1		
2	NB or PC USB port link to port 2		
3	LCD Monitor link to port ③		
4	Headset link to port 4		

Check Item	
Light 6	Rainbow
Headset 4	Check Sound



Appendix

NO#	Equipment Description	ASUS Part#	ASP Source	RSP Source	QTY
1	LCD Monitor (with HDMI port)	-	local	local	1
2	Notebook/PC (with HDMI port&WIN10 OS)	-	local	local	1
3	HDMI Cable	-	local	local	2
4	Type-C to USB cable	-	local	local	1
5	Headset	-	local	local	1

